



INSTALLATION INSTRUCTION

INSTRUCCIONES DE INSTALACION

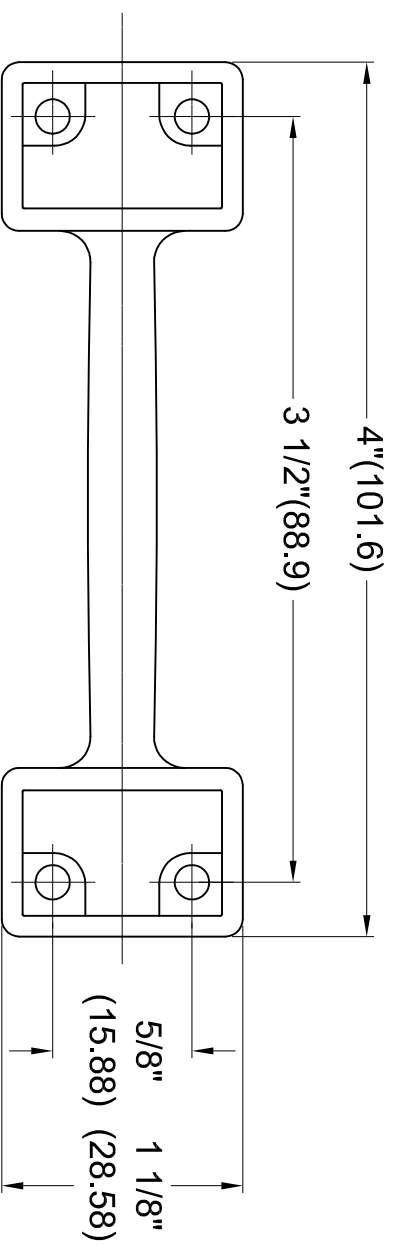

Wood Screw : 3.5*19 x 4
Metric Millimeters in Parenthesis

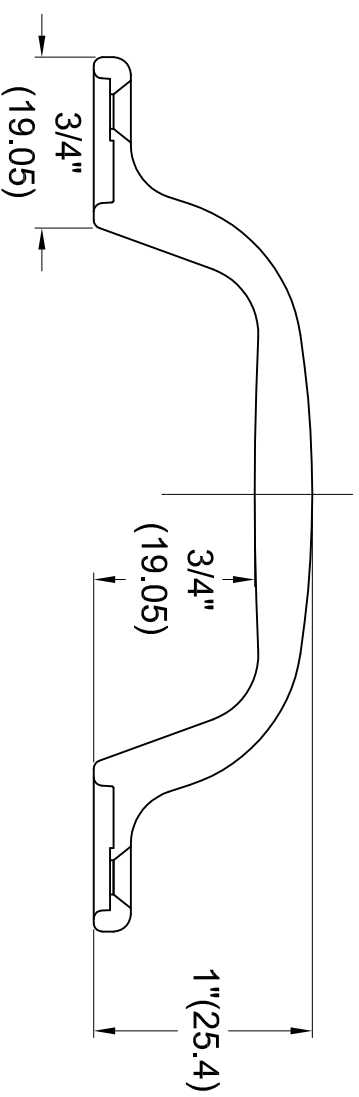

WL2	Rev. A
DWG# : WL2	DATE : 6/2/17
MAT'L : BRASS	