


# SCREEN DOOR TEMPLATE

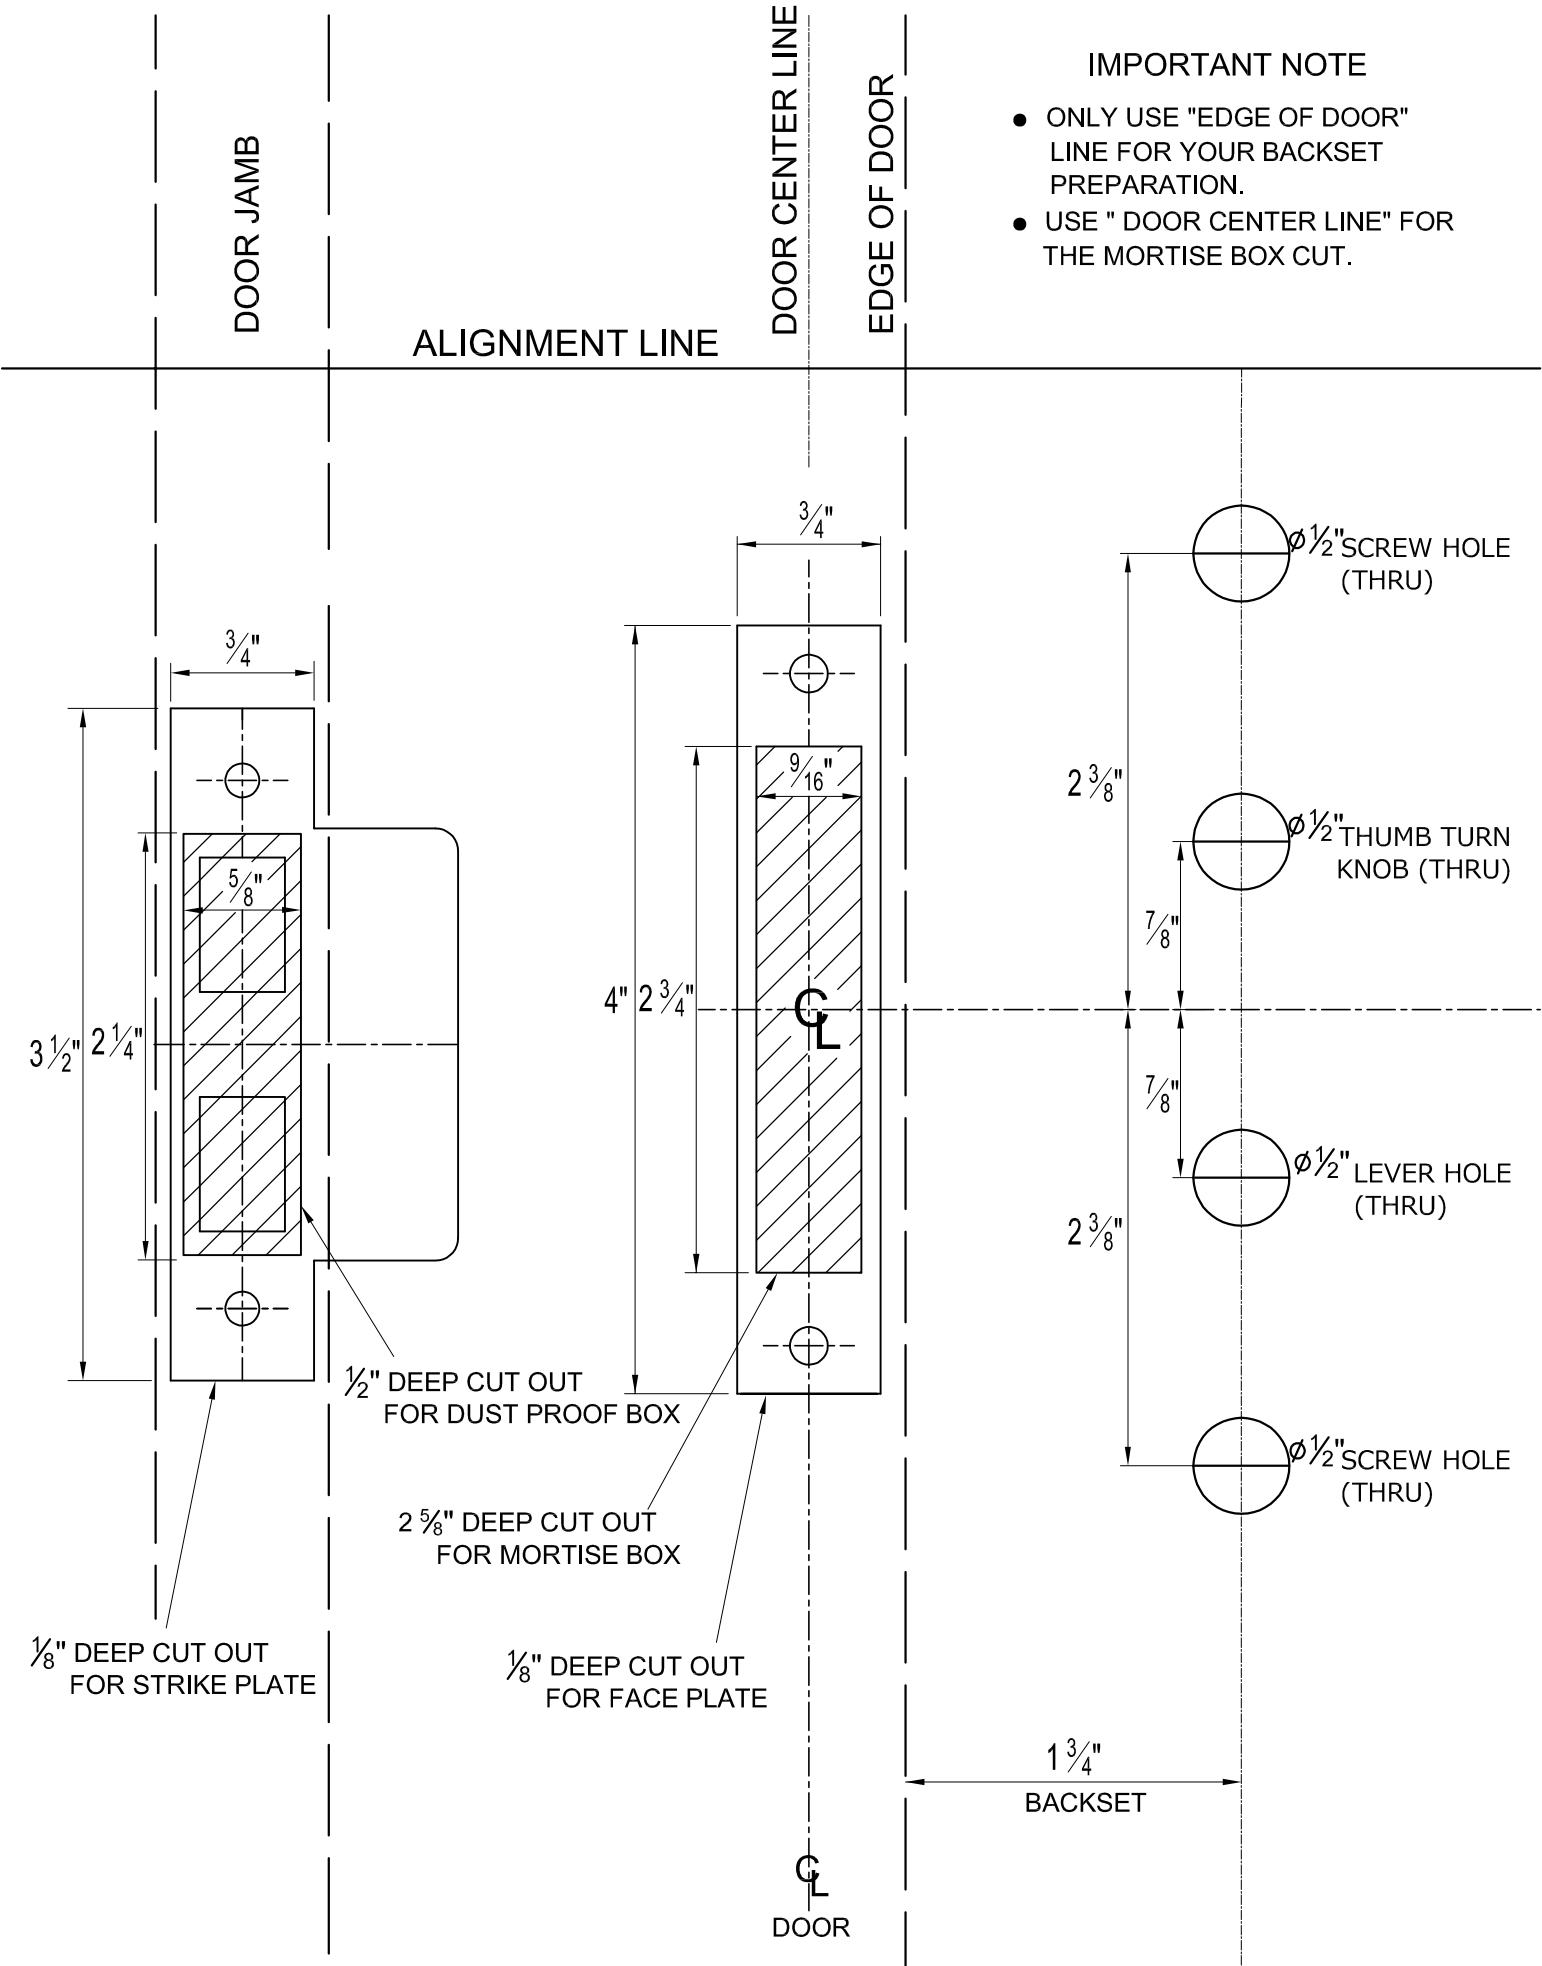

## IMPORTANT NOTE

- ONLY USE "EDGE OF DOOR" LINE FOR YOUR BACKSET PREPARATION.
- USE " DOOR CENTER LINE" FOR THE MORTISE BOX CUT.